

Weather Strip Instructions

Timber Joist Installation

- 1/ Install the Weather Strip rubber joist flashing to the top side of your timber joist. The Weather Strip suits joists up to 50mm in width. Start to fix the Weather Strip at the same end of the joist where you are going to start fastening your decking. Be SURE to place the Weather Strip with the wider flat rubber section to the left side of all the joists when facing your starting point as shown in diagrams below. On the far left hand side joist (Facing Starting Point) move the Weather Strip to the right so the Left Side Flap is Flush with the side of the Joist. On all other joists fasten the Weather Strip with the Fold on the Left Hand Flap directly above the edge of the Left Hand Side of the Joist.
- 2/ Fix the Weather Strip to the joist by using either corrosion class 3 staples or small brads through the thickest part of the Weather Strip.

Facing Starting Point



Diagram 1

Wider Section to the left hand side.

Insert Fastener

Far Left Hand Joist Only...
Move the edge of the flap over to the right so the edge of the flap is flush with the side of the joist.

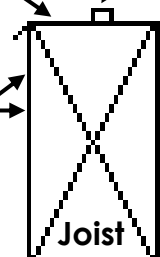


Diagram 2

Steel Joist Installation

- 1/ Position the Weather Strip as described above for Timber Joist Installation.
- 2/ Fix the Weather Strip to the joist by using a suitable spray on glue.

Please Note: For more instructions regarding the Deck Master system please see our web site.

E. info@deckmaster.com.au

www.deckmaster.com.au

Ph.1300 939 041

P.O. Box Salisbury, QLD 4107 Australia